 




Asus ROG GL551J Hard Drive Replacement

Replacement guide for Asus ROG GL551J hard drive.

Written By: Thien Vu

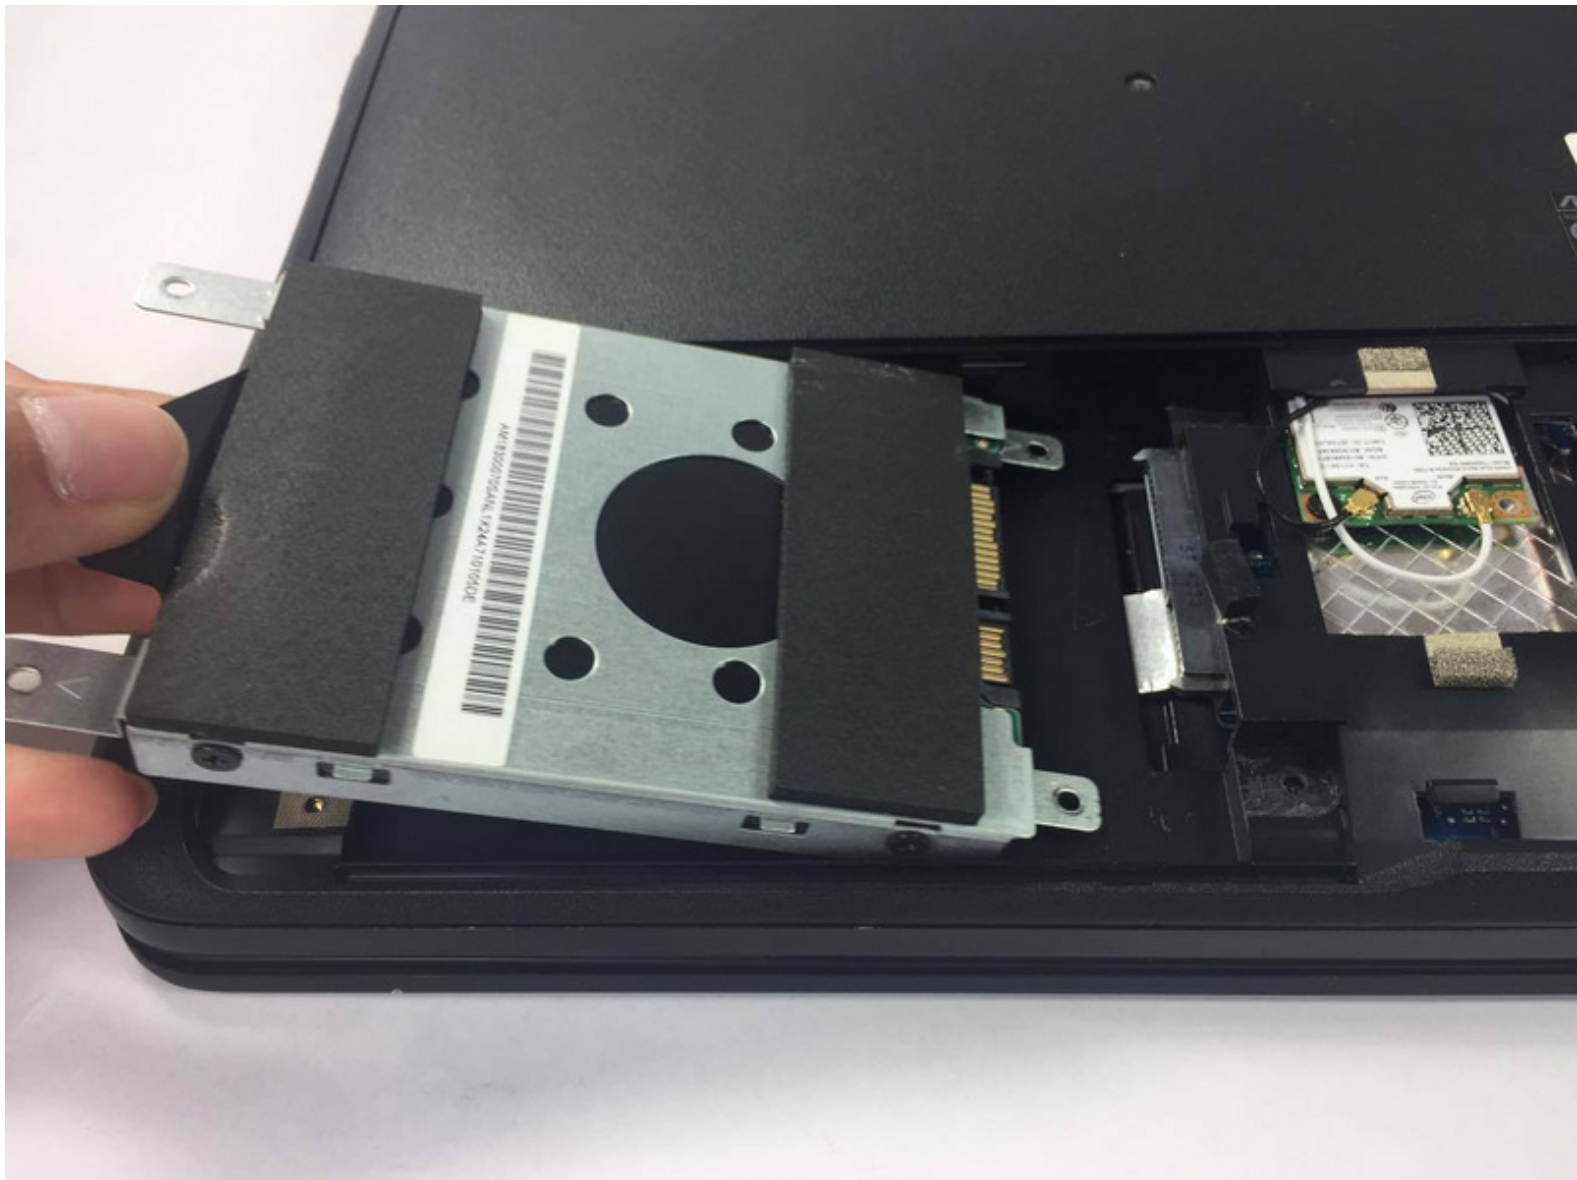

INTRODUCTION

Use this guide to remove replace the hard drive in your Asus ROG GL551J, which can be completed in fewer than 3 steps.



TOOLS:

- [Anti-Static Project Tray](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Battery



- Lay device on a flat surface with battery facing up.

Step 2



- Locate latch below battery and push right.

Step 3



 
- Battery should release upwards. Pull battery out.

Step 4 — Hard Drive




- With laptop upside-down, locate and unscrew the two screws on the panel with the vents.
- Slide the panel out and lift up to remove.

Step 5

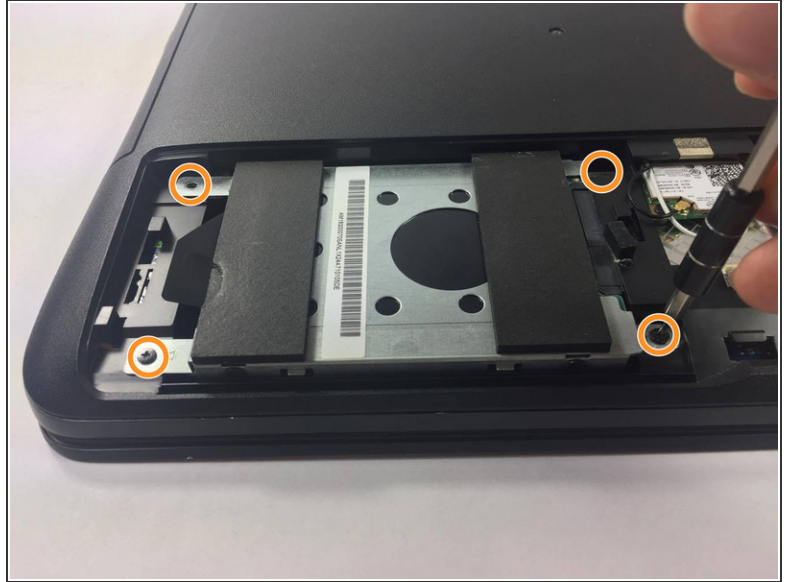

- The hard drive is the metal rectangle with the two soft padding bars attached to it.
- Locate and remove the 4 screws holding the hard drive down at each corner using a PH000 Philips head.

 Step 6

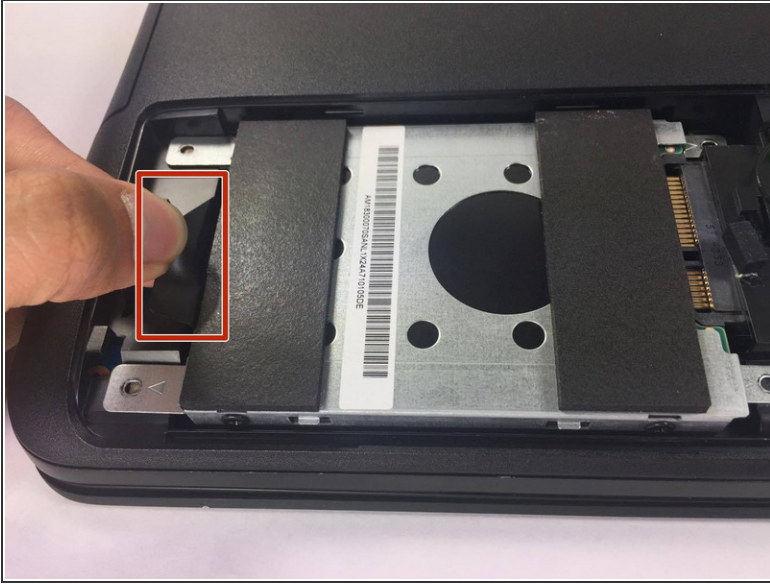

- Locate the black plastic tab attached to the bottom of the hard drive and pull it straight outwards.
- ⚠ Failure to correctly disconnect the hard drive before pulling it up and out can damage the connectors.
- Once the hard drive detaches from the connector, lift the hard drive up and out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-27 03:47:32 PM.